



Optoma HD20 Light Bulb Replacement

Device image not powering on? Try replacing the light bulb with a new one.

Written By: Trevor



INTRODUCTION

Use this guide to remove the light bulb from your Optoma HD20.

TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Phillips #000 Screwdriver](#) (1)
 - [Tweezers](#) (1)
-



- Use a Phillips #1 screwdriver to loosen the screws circled on the bottom of the device.
- ⓘ Screws don't remove completely, only come out 5 mm.

Step 2




- Lift panel off device.

Step 3 — Light Bulb Casing



- Loosen the two screws holding the black casing down with a Phillips #1 screwdriver.
- ⓘ Screws do not remove from black casing

Step 4

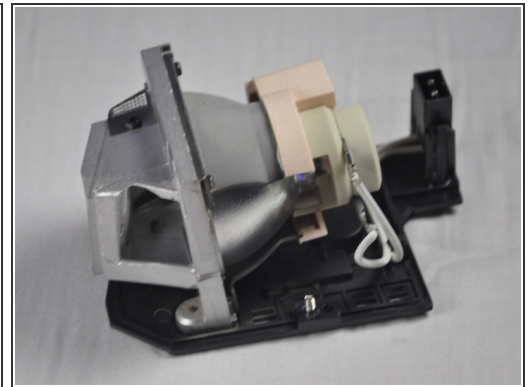


- Once the screws are loosened pull out light bulb casing.
- ⓘ Steps 5-9 may be unnecessary if replacement light bulb comes with housing.

Step 5 — Light Bulb




- Remove the three 4.5 mm screws on the light bulb case.

Step 6

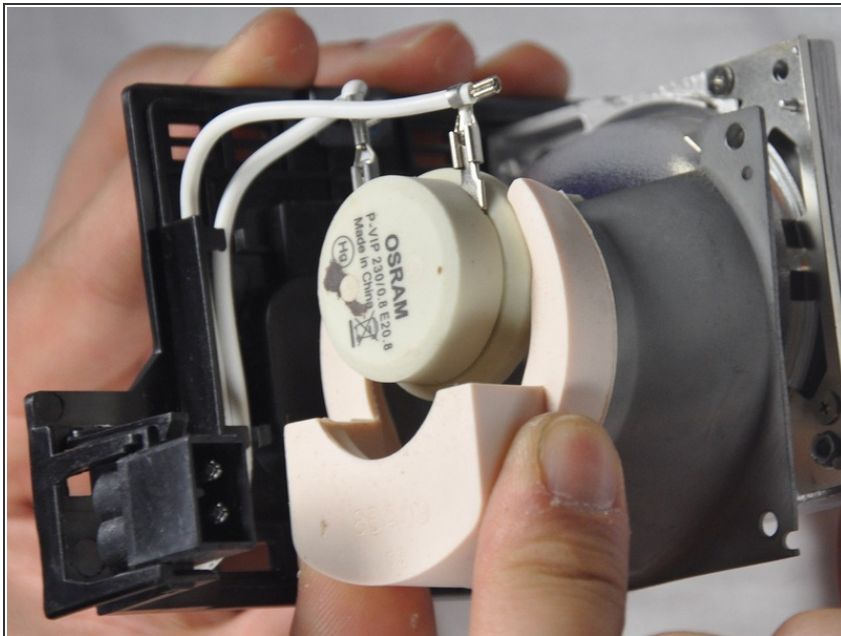


- Carefully pull out the light bulb insulator once the screws have been removed so you do not break it.

Step 7

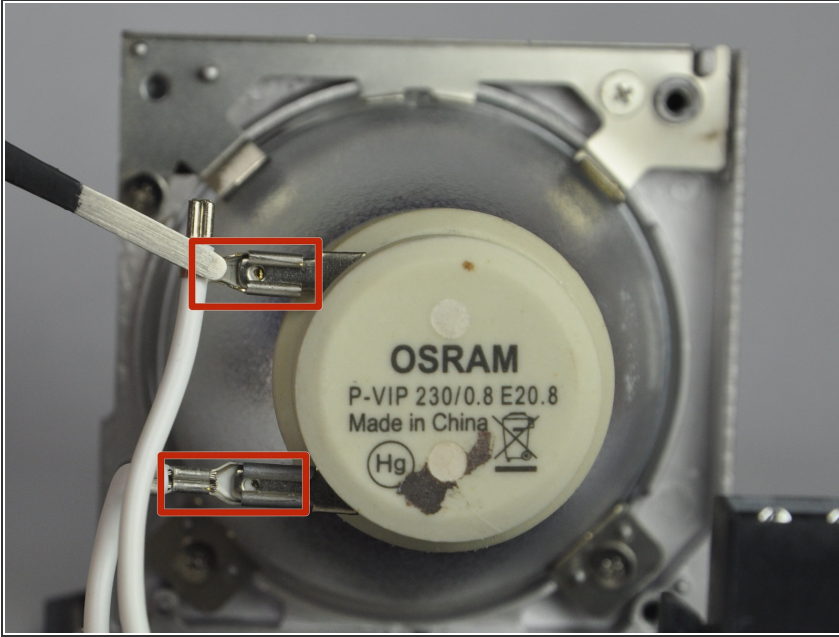

- Gently pull the wires off the pins using metal tweezers.

Step 8

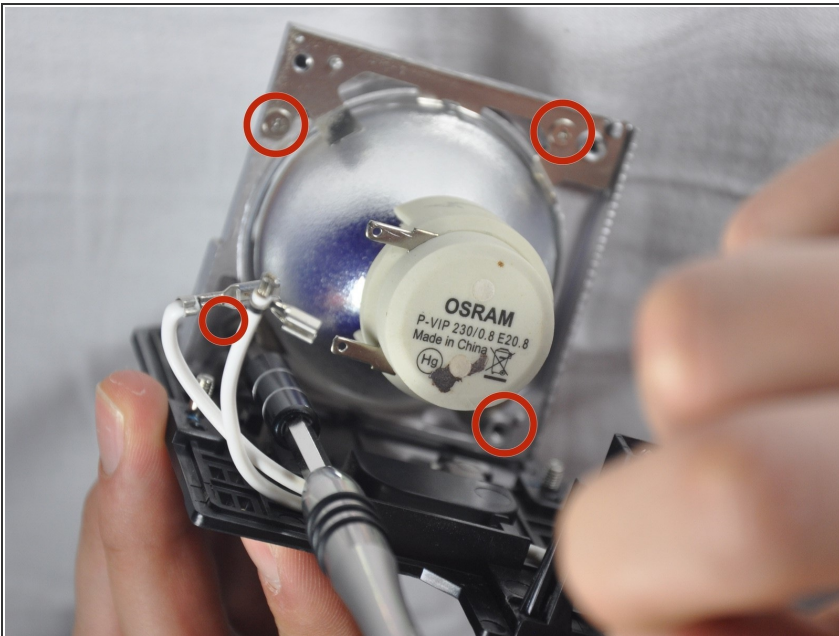

- Remove the 4 screws using a Phillips #1 screwdriver to remove the final casing around the bulb.

Step 9



- Pull the casing off and the gently pull out the light bulb. Then replace the bulb with your new light bulb.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-07-19 02:48:08 AM.